

IMPORTANT!

Addendum to User's Manual

Date: 8/23/02

Opening the Disc Tray

In order for your DVD player's disc tray to open, you must first hook the player up to a TV and select a menu language. See the User's Guide for instructions on how to hook up the DVD player to a TV.

To select a menu language:

1. Once the player is hooked up, turn on the TV and the DVD player. The menu language screen will be displayed.
2. Use the arrow buttons on the remote to highlight the language of your choice.
3. Press OK to select the language. You will now be able to open the disc tray.